

Loiacono, Elizabeth

From: Stephen Light <stephen.light@sitro.com.au>
Sent: Friday, 9 March 2012 1:48 PM
To: Kinnersly, Stephen
Subject: Gasmate PC1070 portable butane cooker
Attachments: PC1070_Instructions_Final.pdf

Hi Stephen,

Further to our conversation this afternoon I have attached the instruction manual for our PC1070 portable butane cooker.

If you have any further queries please do not hesitate to contact me.

Regards,



Stephen Light
Product Development Engineer

Sitro Group Australia Pty Ltd | 33-35 Lionel Road Mount Waverley VIC 3149 Australia
p. 03 9543 9533 | f. 03 9543 9839 | m. 0434 075 150
e. stephen.light@sitro.com.au | w. www.sitro.com.au


Gasmate | Chapala Chimenea | Explore Planet Earth | Lökkii | Smart Shade

This email (including any attachments) contains information which is confidential and may be subject to legal privilege. If you are not the intended recipient, you must not use, distribute or copy this email. If you have received this email in error, please notify the sender immediately and delete this email. Any views expressed in this email are not necessarily the views of Sitro Group Australia Pty Ltd

Gasmate

Portable Cooker – PC1070

- 7,500 BTU output
- Rotary piezo ignition
- Pressure sensing safety shut-off device
- Convenient storage/carry case
- Perfect for camping or home
- Uses standard butane cartridge
- For outdoor use only
- AGA Certified

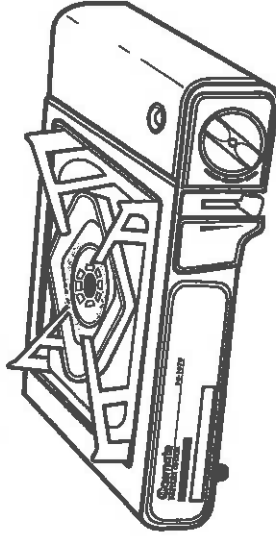

WARNING

ONLY USE IN WELL VENTILATED AREAS. CARBON MONOXIDE HAZARD – THIS APPLIANCE CAN PRODUCE CARBON MONOXIDE WHICH HAS NO ODOR. USING IT IN AN ENCLOSED SPACE (FOR EXAMPLE, CARAVAN, TENT, CAR, MOBILE HOME) MAY CAUSE DEATH.



- DO NOT USE MULTIPLE APPLIANCES TO HEAT A SINGLE COOKING DEVICE
- DO NOT USE OVERSIZED COOKING DEVICES (MAXIMUM 27cm DIAMETER)
- DO NOT USE AS A SPACE HEATER OR FOR ANY PURPOSE OTHER THAN COOKING DURING USE. AVOID BOIL OVER AND SPILLAGE

Gasmate® is a registered trademark of: Silro Group Australia Pty Ltd www.gasmate.com.au
Aber, Hamilton, N.Z. www.gasmate.co.nz

Important: Retain these instructions for future use.

02548 09/11

TROUBLESHOOTING:

Problem/Cause	No Ignition	No Burning	Unstable Flame	Uneven Flame	Slow Burning	Gas Smell	Stopped Working While in Use	Continued Burning	Solution
Lack of fuel	•	•	•	•	•		•		Replace Cartridge
Piezo plug dirty	•								Clean spark point
Dirty burner	•	•	•	•	•				Clean burner
Cartridge misaligned	•	•	•	•	•	•			Reset correctly
Dirty burner or empty cartridge	•	•	•	•	•				Request for inspection/service
Faulty knob mechanism	•					•			Request for inspection/repair
Internal gas pressure too high							•		Cool down gas
Safety device activated	•							•	Request for inspection/service
Improper setting of spark point	•								Set spark point to 2mm (5/64") away from burner

Due to continual development, specifications are subject to change without notice.

SAFETY TIPS:

DO'S

- Turn gas off at ignition knob after use.
- Check that burner is fully extinguished before disconnecting the gas container.
- Remove the gas cartridge when not in use.
- Change the gas container outside and away from people.
- Check the seals before connecting a new gas container to the appliance.
- Always remove the cooker from the carry case prior to use.
- Ensure the pan support is turned upright before inserting the cartridge.
- Keep children away from this appliance.
- Make sure there is adequate ventilation under the unit.
- Only operate on flat, horizontal surfaces.
- Use the cooker in cool places or in the shade. Keep the cartridge compartment out of direct sunlight.
- Always check the gas cartridge position inside the compartment for leaks. If a leak occurs, turn off the supply and remove the gas cartridge.

CARE AND CLEANING:

- The outside of the cooker can be wiped clean with a mild solution of dishwashing detergent and finished off with a dry cloth. Do not use abrasive pads.
- The removable drip pan can be washed thoroughly. Always dry after washing.
- We recommend the burner head be cleaned by gentle scrubbing with a dry brush at least annually. Ensure that the burner ports are free of any obstructions.
- Occasionally clean the point of the piezo plug with a hard brush or file.

KEEP THIS APPLIANCE AWAY FROM COMBUSTIBLE MATERIALS

MINIMUM CLEARANCES: REAR 600mm - SIDE 600mm - TOP 500mm
Nominal gas consumption - 130g/h Injector Size 0.6mm


WARNING
BEFORE INSERTING A CARTRIDGE, ALWAYS ENSURE THAT THE PAN SUPPORT/DRIIP TRAY HAS BEEN TURNED AND PLACED IN THE UPRIGHT AND CORRECT POSITION.

IMPORTANT
Read these instructions for use carefully. Familiarize yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference. This appliance shall only be used with a butane gas cartridge certified to EN 417 or equivalent. IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CONTAINERS.
* REMOVE ANY TRANSIT PROTECTION MATERIAL.

CAUTION

**PAN SUPPORT
COOKING POSITION**

**NOT FOR COOKING
FOR STORAGE ONLY**

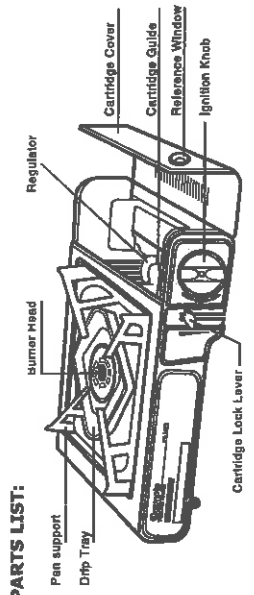

TO START:
INSERTING THE GAS CARTRIDGE

1. Turn the Ignition Knob to 'OFF' and set the Cartridge Lock lever to 'UNLOCK'.

Note: If the Ignition Knob is 'ON' the gas cartridge cannot be inserted into the cooker.




2. Open the Cartridge Cover, slide the gas cartridge, top end first and with its notch up, into the compartment. Align the notch with the loading guide in the compartment. (Fig. 2)

Check that the seals between the appliance and the gas container are in place and in good condition, before connecting the gas container.

- DO NOT use this appliance if it has damaged or worn seals.
- DO NOT use this appliance if it is leaking, damaged or does not operate properly.

3. Push the Cartridge Lock down to 'LOCK' in one firm motion (Fig. 3).

Note: If the Pan Support has not been turned over into its upright position the lever will not engage.

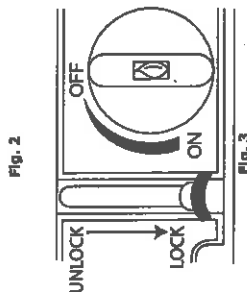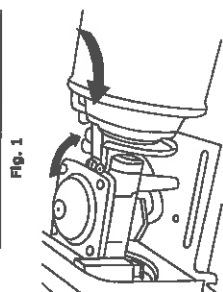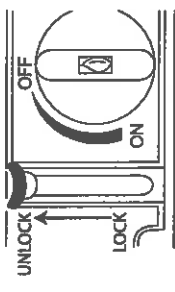

WARNING
BEFORE LIGHTING THE COOKER, ALWAYS ENSURE THAT THE PAN SUPPORT/DRIIP TRAY HAS BEEN TURNED AND PLACED IN THE UPRIGHT AND CORRECT POSITION.


WARNING
THE OPENINGS AT THE BASE OF THE BURNER PROVIDE AIR FOR COMBUSTION, THEY SHOULD NEVER BE OBSTRUCTED. IF THE FLAME BECOMES SIGNIFICANTLY ORANGE CHECK THESE OPENINGS FOR A BLOCKAGE.
IF THE APPLIANCE CANNOT BE ADJUSTED TO PERFORM CORRECTLY IT SHOULD NOT BE USED UNTIL SERVICED OR REPAIRED.

LIGHTING THE COOKER:

1. Turn the knob anti-clockwise past the 'ON' position until a click is heard.
2. If the burner fails to light, immediately turn the Ignition Knob to the 'OFF' position and repeat Step 1.

TO ADJUST HEAT:


1. Flame can be controlled by turning the Ignition Knob between the 'ON' and 'OFF' position.

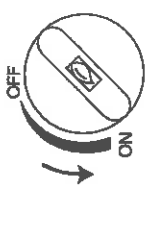

TO SHUT OFF:

1. Turn the Ignition Knob to 'OFF' to shut off fuel supply (Fig. 5). Wait until the flame is fully extinguished before performing the next step.
2. Raise the Cartridge Lock Lever to 'UNLOCK' and remove the gas cartridge from the compartment.

Note: Do not leave the gas cartridge inside the unit when not in use.

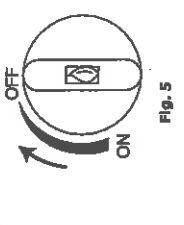

• The cartridge may be disconnected even if some gas remains.
• Check the contents by shaking and listening for the liquid gas.
Gas containers shall only be changed in a well ventilated location, preferably outside, away from people and away from sources of ignition; such as naked flames, pilot flames, electric heaters/equipment.
If there is a leak on your appliance (smell of gas) and you cannot stop the gas flow, remove the appliance to a well ventilated location away from any ignition source. Only check for leaks outdoors using soapy water. DO NOT try to detect leaks using a flame.
This appliance must only be serviced by an authorized person.

AFTER USE:

1. Replace the cap on the gas cartridge after removing it from the unit. Store upright in a cool dry place.
2. Make sure the burner is cool to touch before packing unit away.
3. DO NOT store the cartridge near other flammables.
DO NOT store the cartridge near sources of heat or direct sunlight.
DO NOT store in the glove compartment or boot of your car.
DO NOT puncture or incinerate empty cartridges.

HANDLING WHEN THE AUTOMATIC SAFETY SHUT-OFF DEVICE IS ACTIVATED:

- When used in high temperature areas, such as the beach during summer or in a hot room, the internal pressure of the cartridge may rise to more than 7kg/cm² (normal pressure = 3-4kg/cm²). This will activate the Automatic Safety Shut-off Device inside the regulator.
- Remove the Gas Cartridge from the compartment. Push the nozzle inward to release internal pressure and place in a cool or shady area.
- Turn the Ignition Knob to 'ON' to release any excess gas inside the regulator. Repeat the 3 steps for inserting the gas cartridge after it has cooled down.